 


Thank you for your interest in the Little Learner tablet. The Little Learner will need to be connected to the internet to download some of the apps in KIDS mode. The icons will have a down arrow next to them. Once downloaded, you will not need the internet.

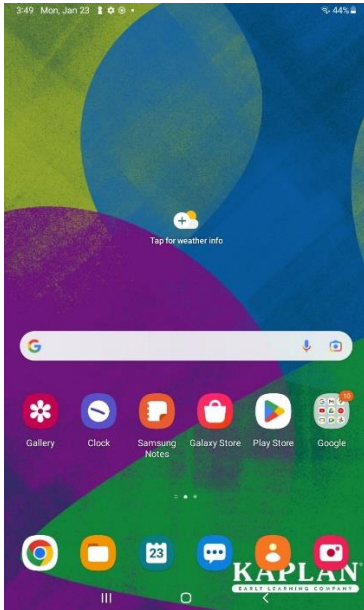


Teacher / Parent Background



Kids Mode Background

To enter KIDS mode or TEACHER mode: Enter the password 1234.

If you are on the TEACHER side, select the Samsung Kids Icon by swiping up and to the left. This will take you to the Kids Mode. You will recognize it by the background pictured above.

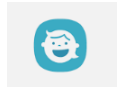

When using the app, the screen will enter full screen to minimize distractions. To exit an app, swipe up and push the < button.



The 3 icons at the bottom of the tablet are as follows:

III – Recent apps ○ - Home Screen < - Back button/ Previous Screen

Have additional questions? Email us at kaptech@kaplanco.com or call the Tech Line at 1-800-533-2166.